



MV Agusta Brutale 800
ID: 70401012



Complete set and assembly scheme:

Left side:

Right side:

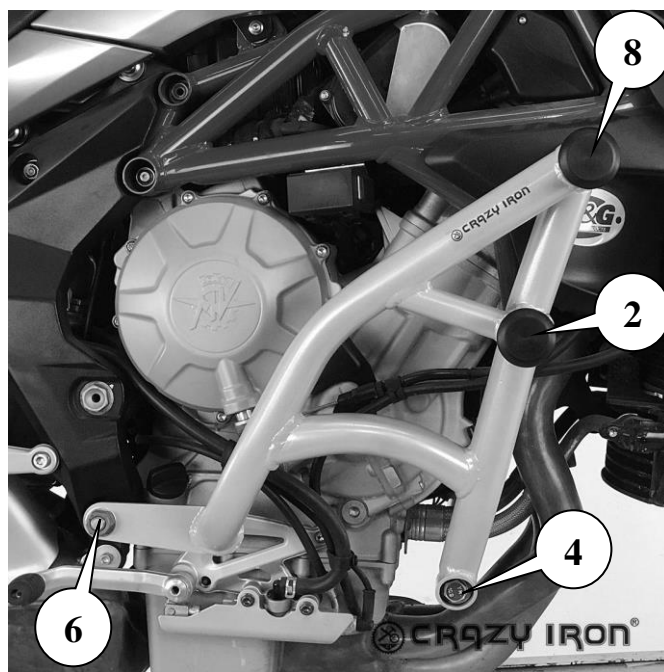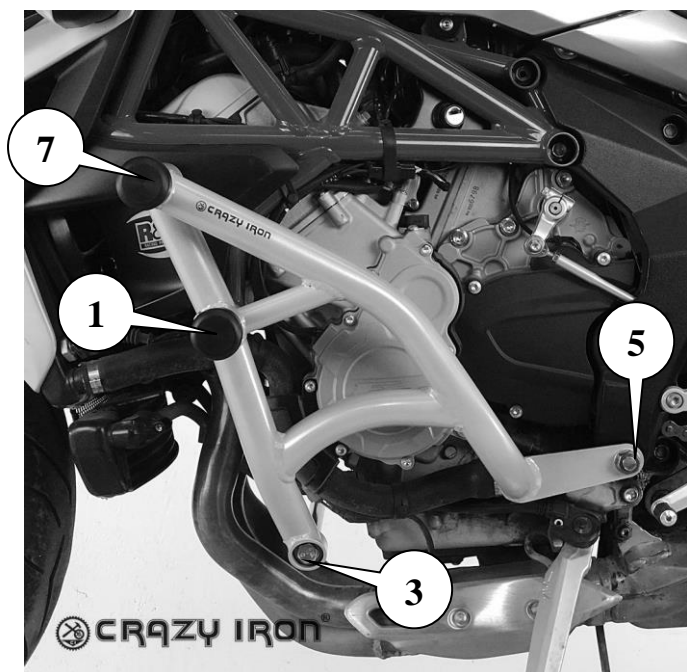

1. Rod M12x450 + Washer + Nut + Bolt M6x16 + Slider
2. Rod from p.1. + Washer + Nut + Bolt M6x16 + Slider
3. Bolt M10x1,25x30 + Washer + Spring washer + brace L=255
4. Bolt M10x1,25x30 + Washer + Spring washer + brace from p.3
5. Rod M12x350 + Washer + Nut + sleeve 20x12x64
6. Rod from p.5 + Washer + Nut + sleeve 20x12x56
7. Bolt M6x16 + Slider
8. Bolt M6x16 + Slider

Installing:

1. Remove original nuts in points №1 and №5
2. Lightly remove Bolts from points №1 and №5
3. Attach left side of cage to points №1 and №5 through the sleeve 20x12x64. Install rods from kit and shift original bolts using these rods.
Don't remove original bolts without install rods from kit!!!
4. Attach right side of cage to points №2 and №6 through the sleeve 20x12x56 and fix it with nuts.
5. Install brace between points №3 and №4 and tight lightly with Bolts M10x30
6. Tighten the fasteners according to the table:
7. Install Sliders in points №№1,2,7,8 and fix them with screws M6x16