

Crazy Iron



SUZUKI GSXS750
ID: 2700112/2700117



Installing:

Left side:

Right side:

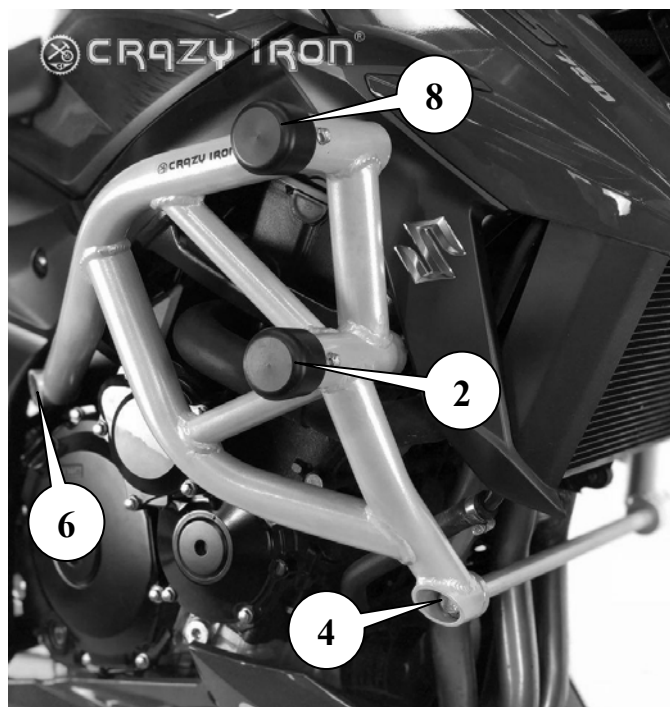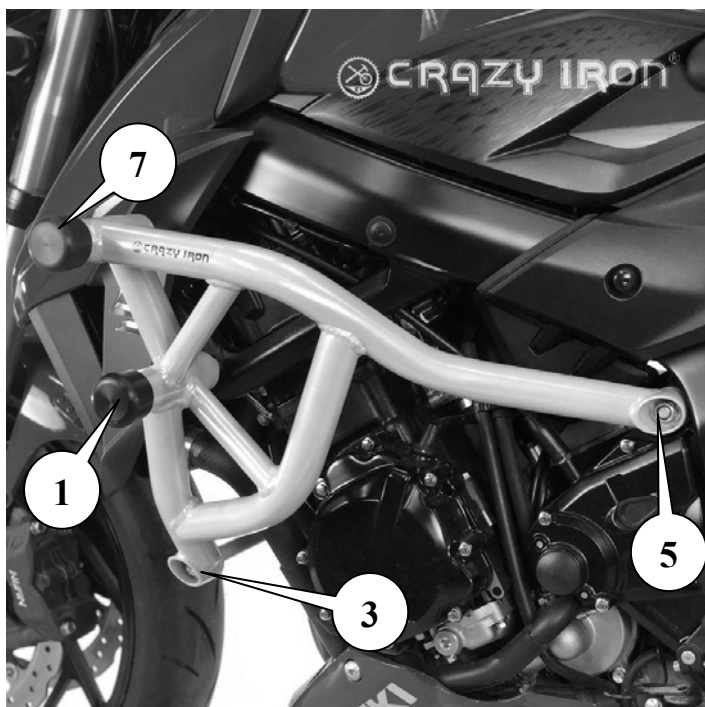

1. Bolt M10x1,25x90 + Washer + Spring washer + Slider + screw
- 2.
3. Bolt M10x1,25x90 + Washer + Spring washer + Slider + screw
4. Bolt M10x30 + Washer + Spring washer + Brace 22x10x350
5. Bolt M10x30 + Washer + Spring washer + Brace #3
6. Rod M10x300 + Washer + Nut
7. Rod #5 + Washer + Nut
8. Slider + screw (In case Damper Cage us Damper sliders)
9. Slider + screw₃ (In case Damper Cage us Damper sliders)

Comments:

1. Remove original Bolts in points №1 and №5
2. Attach left side of cage to motorcycle and screw lightly with Bolt M10x1,25x90 in point №1 and with rod M10x300 in point №5.
3. Remove original Bolt in points №2 and №6
4. Attach right side to motorcycle and screw lightly with bolt M10x1,25x90 in point №2 and rod M10x300 in point №6.
5. Install brace between points №3 and №4 screw lightly with bolts M10x30
6. Tighten the fasteners according to the table.
7. Install Sliders in points №1,2,7,8 (In case 2600117 use damper sliders).

Thread	Tightening torques Nm	
	Connection type	
	Steel	Aluminum
M6	10	6
M8	24	20
M10	48	35
M12	56	45