

# Crazy Iron





Kawasaki Z900  
ID 4055412/4065412/4055417/4065417

Installing:

Left side:

Right side:

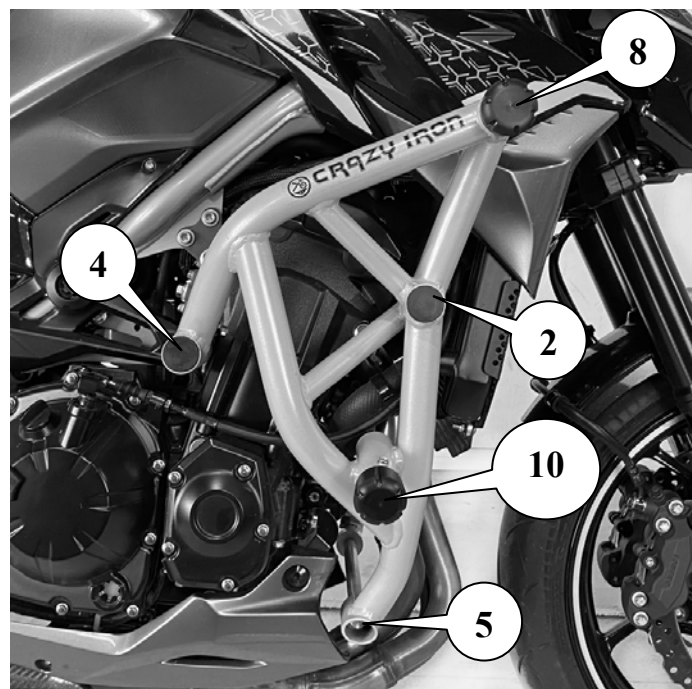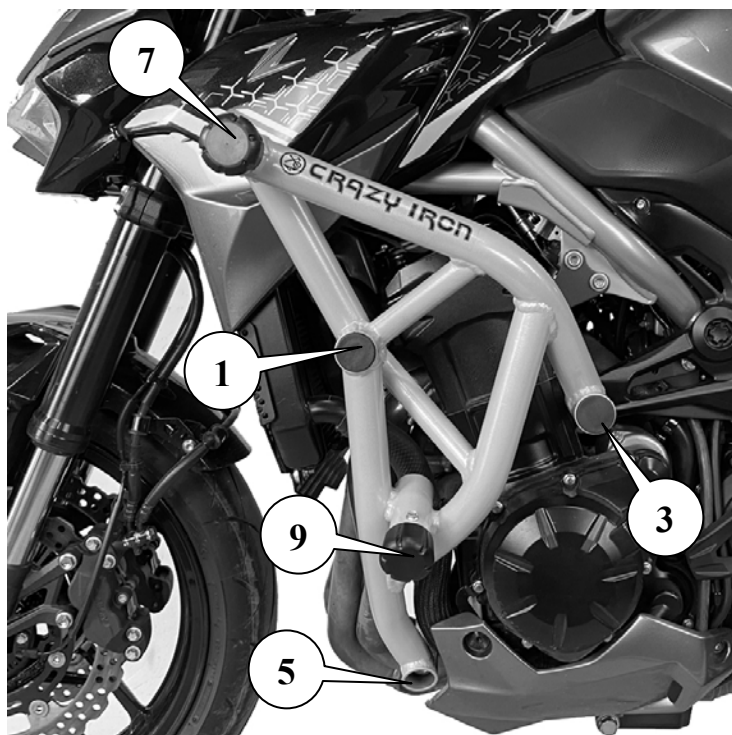
































# CRAZY IRON

МЫ ПРОИЗВОДИМ БЕЗОПАСНОСТЬ

## Comments:

1. Contact a specialized service, do not install the cage yourself!
2. Remove original bolts in points №1, №3
3. Attach left side of cage to points №1 and №3
4. Screw lightly with bolt M10x1,25x90 left side of cage in point №1 and bolt M10x1,25x60 in point №3
5. Remove original bolts in points №2, №4
6. Attach right side of cage to points №2 and №4
7. Screw lightly with bolt M10x1,25x90 right side of cage in point №2 and bolt M10x1,25x60 in point №4
8. Install between points №5 and №6 the brace 265 mm and fix with bolts M10x1,25x30
9. Tighten the fasteners according to the table.
10. Install sliders in points №7,8,9,10 and fix them with screws M6x16 (In case 10449417 use damper sliders).
11. Install caps in points №1, №2, №3 and №4

Tightening torques Nm		
Thread	Connection type	
	Steel	Aluminum
M6	10	6
M8	24	20
M10	48	35
M12	56	45

N	Items				
1	Bolt M10x1,25x90	Spring washer	Washer,	Cap	
					
2	Bolt M10x1,25x90	Spring washer	Washer,	Cap	
					
3	Bolt M10x1,25x60	Spring washer	Washer,	Cap	
					
4	Bolt M10x1,25x60	Spring washer	Washer,	Cap	
					
5	Bolt M10x1,25x30	Spring washer	Washer	Brace L=265	
					
6	Bolt M10x1,25x30	Spring washer	Washer		
					
7	Slider	Screw			
					
8	Slider	Screw			
					
9	Slider	Screw			
					
10	Slider	Screw			
	