



CRAZY IRON

МЫ ПРОИЗВОДИМ БЕЗОПАСНОСТЬ




ID 405912


KAWASAKI ZX6R 2005-2006

Installing:

Left side:

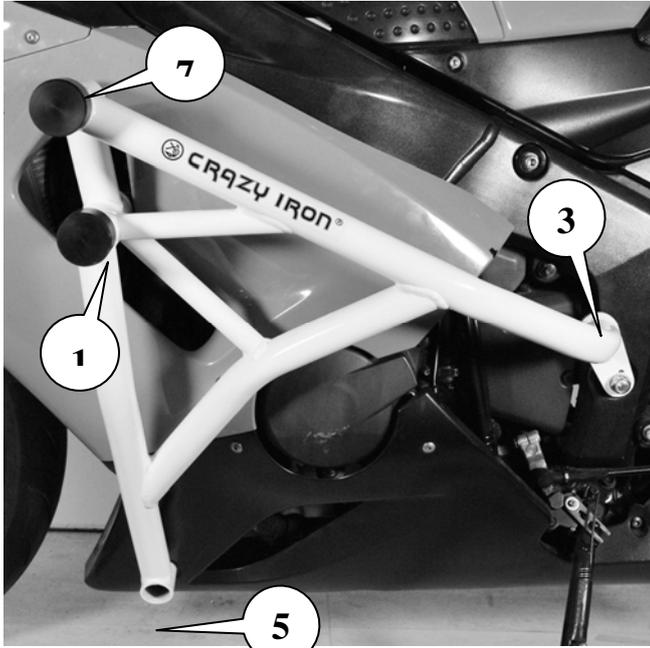

Right side:

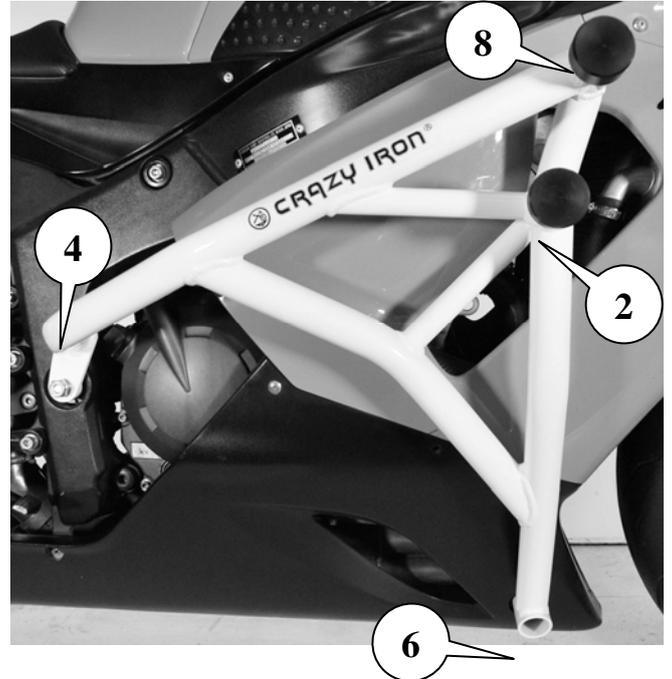

1	Bolt M10x1.25x70 - 1 pc. Bolt M10x1.25x40 - 1 pc. Washer - 2 pc. Spring washer - 2 pc. Plate (look at pic.) - 1 pc. spacer 20x10x10 - 1 pc. slider - 1 pc. bolt M6x16 - 1 pc.	Screw the plate (look at the pic on the right) with bolt M10x1,25x70 through spacer 22x10x10 to the frame of motorcycle at the point 1. Then screw cage with bolt M10x1,25x40 to the plate.	
2	Bolt M10x1.25x90 - 1 pc., washer -1 pc., spring washer - 1 pc., slider - 1 pc., bolt M6x16 - 1 pc.		
3	Stud-bolt M10x385 - 1pc., screw-nut - 1 pc., washer - 1 pc., spacer 22/10/8 - 1 pc.		

Внимание:


Дуги не гарантируют полную защиту мотоцикла, а лишь снижают вероятность его повреждения при падениях.

По всем вопросам связанным с установкой нашей продукции, а также с гарантийными обязательствами, обращайтесь пожалуйста напрямую в любое отделение Crazy Iron. Контакты ближайших отделений смотрите на нашем сайте.



CRAZY IRON

МЫ ПРОИЗВОДИМ БЕЗОПАСНОСТЬ

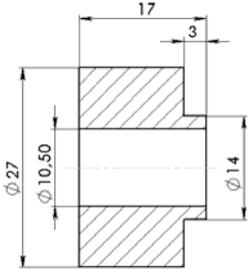4	Stud-bolt look p.3 Screw-nut - 1 pc. Washer - 1 pc. spacer (look at the pic.) - 1 pc.	
5	Bolt M10x30 - 1 pc., tube 22x10x180 - 1pc., washer - 1 pc., spring washer - 1 pc.	
6	Bolt M10x30 - 1 pc., tube look at p.5, washer - 1 pc., spring washer - 1 pc.	
7	Slider - 1 pc., bolt M6x16 - 1 pc.	
8	Slider - 1 pc., bolt M6x16 1 pc.	

NEVER LOOSEN ENGINE BOLTS FROM THE LEFT AND RIGHT SIDES AT THE SAME TIME!!!

1. Find the fixing points of cage.
2. Remove the left standard bolt of the front engine mount to the frame. Sew the plate (look at the pic. with bolt M10x1,25x70 through spacer 22x10x10 to the frame of bike at the point 1. Then screw the cage with bolt M10x1,25x40 to the plate at point 1
3. Attach the arc to the motorcycle according to the attachment points.
4. Start a screw front bolt, at point №1
5. Pass stud-bolt M10x385 through the rear point, of the mount to the motorcycle, point № 3
6. Repeat the same procedure for right side.
7. Cut a hole in the motorcycle plastic to connect the left and right arcs.
8. Connect points 5 and 6 with the stud-bolt M10x380 through the tube.
9. Tighten the entire assembly with effort, as shown in the table below.
10. Install sliders in the according seat seats and secure them with bolts M6x16

Thread	Tightening torques Nm	
	Connection type	
	Steel	Aluminum
M6	10	6
M8	24	20
M10	48	35
M12	56	45

Внимание:

Дуги не гарантируют полную защиту мотоцикла,
а лишь снижают вероятность его повреждения при падениях.

По всем вопросам связанным с установкой нашей продукции,
а также с гарантийными обязательствами,
обращайтесь пожалуйста напрямую в любое отделение Crazy Iron.
Контакты ближайших отделений смотрите на нашем сайте.