



# CRAZY IRON

МЫ ПРОИЗВОДИМ БЕЗОПАСНОСТЬ

ID 3600112



Yamaha MT-10



Installing:

Left side:

Right side:

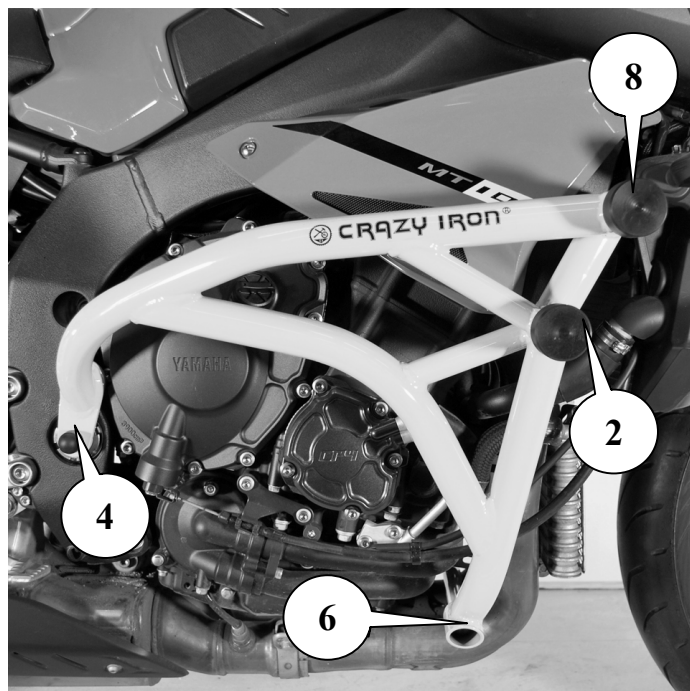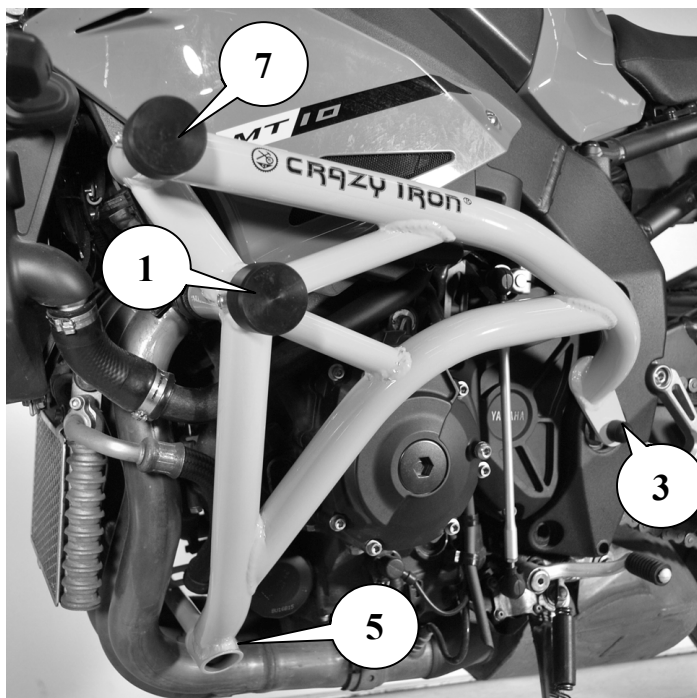

1. Bolt M12x1.25x60 + washer + spring washer + slider + screw  
Depending on the modification of the frame it can be installed centering sleeve 30x17,5x7mm
2. Bolt M12x1.25x60 + washer + spring washer + slider + screw  
Depending on the modification of the frame it can be installed centering sleeve 22x17,5x7mm
3. Stud-bolt M10x395 + washer + screw-nut
4. Stud-bolt look point 3 + washer + screw-nut + spacer 26x10x8/3
5. Stud-bolt M10x305 + washer + screw-nut + spacer 20x10x250
6. Stud-bolt см п. 5 + washer + screw-nut + spacer look point 5
7. Slider + screw
8. Slider + screw

Thread	Tightening torques Nm	
	Connection type	
	Steel	Aluminum
M6	10	6
M8	24	20
M10	48	35
M12	56	45

**NEVER LOOSEN ENGINE BOLTS FROM THE LEFT AND RIGHT SIDES AT THE SAME TIME!!!**

Внимание:

Дуги не гарантируют полную защиту мотоцикла,  
а лишь снижают вероятность его повреждения при падениях.

По всем вопросам связанным с установкой нашей продукции,  
а также с гарантийными обязательствами,  
обращайтесь пожалуйста напрямую в любое отделение Crazy Iron.  
Контакты ближайших отделений смотрите на нашем сайте.

[www.crazyiron.ru](http://www.crazyiron.ru)