

# Crazy Iron



HONDA CBR600RR '07-'08  
ID: 1049112/1049117



## Complete set and assembly scheme:

Left side:

Right side:

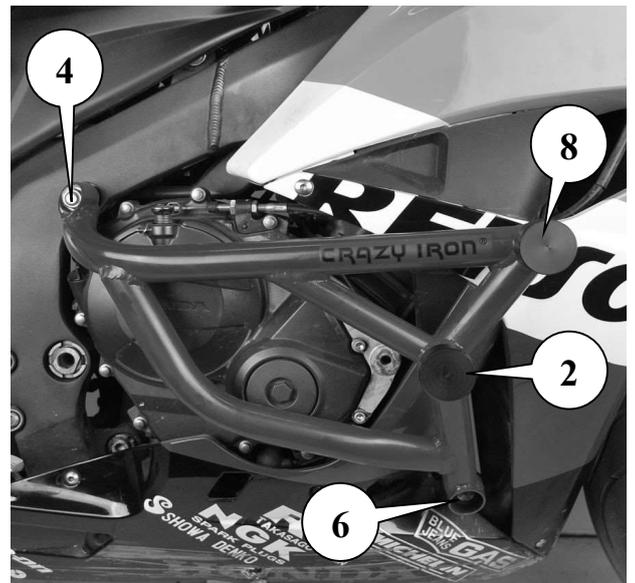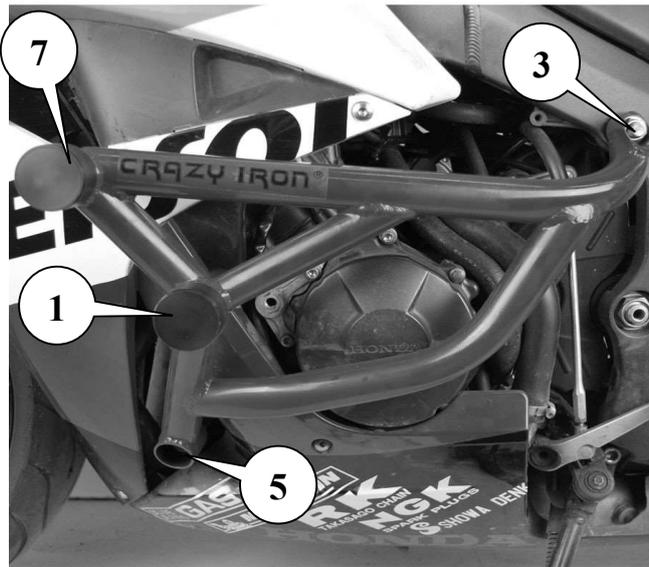

### Comments:

1. Contact a specialized service, do not install the cage yourself!
2. Cut holes in fairing with a diameter of 35mm at points No. 1 and No. 2
3. Remove the original bolt in point №1
4. Attach the left side of cage to points №1 and №3
5. Screw lightly left side of cage with bolt M12x1.25x100 to point No. 1 and with rod M12x380 to point No. 3
6. Remove original bolts in points No. 2
7. Attach the right side of cage to points №2 and №4
8. Screw lightly right side of cage with bolt M12x1.25x100 to point No. 2 and with nut to point No. 3
9. Install a brace 255 mm long between points No. 5 and No. 6 and fix it with bolts M10x1.25x30
10. Torque fastener according to the table.
11. Install Sliders at points No. 1,2,7,8 and fix them with self-tapping screws (In the case of using a damper cage, article 1049117 is used instead of sliders at point No. 1,2,7,8 use damper sliders).

**NEVER LOOSEN ENGINE BOLTS FROM THE LEFT AND RIGHT SIDES AT THE SAME TIME!!!**

Tightening torques Nm		
Thread	Connection type	
	Steel	Aluminum
M6	10	6
M8	24	20
M10	48	35
M12	56	45

Component table with according numbers in the photo:

№	Items				
1	Bolt M12x1,25x100	Spring washer	Washer	Slider	Screw
					
2	Bolt M12x1,25x100	Spring washer	Washer	Slider	Screw
					
3	Rod M12x380	Spring washer	Washer		
					
4		Spring washer	Washer		
					
5	Bolt M10x30	Spring washer	Washer	Brace L=255	
					
6	Bolt M10x30	Spring washer	Washer		
					
7	Slider	Screw			
					
8	Slider	Screw			
					