



CRAZY IRON

МЫ ПРОИЗВОДИМ БЕЗОПАСНОСТЬ

ID: 1047112 / 1047117



HONDA CBR600RA (CBR600RR с ABS) 2009-2012

Installing:



Left side

Right side

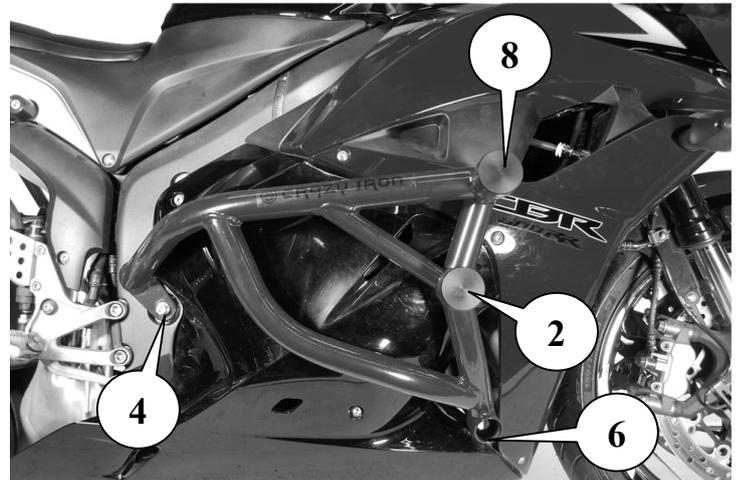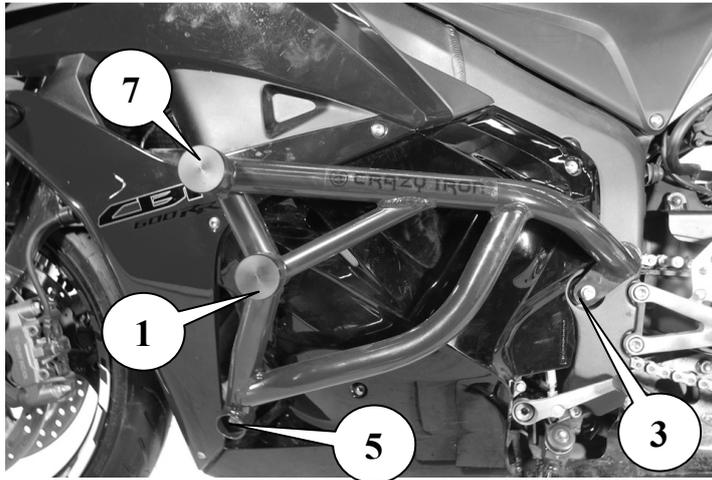

Comments:

Needs improvement of plastic

Completeness of set:

1. Bolt M12x1.25x100 + washer + screw-nut + sllider + bolt M6x16
2. Bolt M12x1.25x100 + washer + screw-nut + sllider + bolt M6x16
3. Bolt M8x45 + washer + spring washer + rod L=300
4. Bolt M8x20 + washer + spring washer + rod look p.3
5. Bolt M10x30 + washer + tube 22x10x255
6. Bolt M10x30 + washer + tube look p.5
7. Slider + bolt M6x16
8. Slider + bolt M6x16

Sequence of assembly:

1. Find the front points where cage fix.
2. Cut a hole in plastic with a diameter of 36-38mm at the points "1" and "2 "
3. Turn out the left standard bolt of a forward fastening of the engine to a frame.
4. Attach the arc to the motorcycle according to the attachment points
5. Start a screw front bolt through the hole in plastic, at point №1
6. Pass the rod from the kit through the rear attachment point of the engine to the frame and screw the arc at point 3
7. Repeat the procedure for the right side.
8. Connect points "5" и "6" through tube with bolts M10x30.
9. Install sliders in the according seat places and secure them with bolts M6x16
10. Tighten all the fasteners with effort, according to the table below.

NEVER LOOSEN ENGINE BOLTS FROM THE LEFT AND RIGHT SIDES AT THE SAME TIME!!!

Thread	Tightening torques Nm	
	Connection type	
	Steel	Aluminum
M6	10	6
M8	24	20
M10	48	35
M12	56	45

Внимание:

Дуги не гарантируют полную защиту мотоцикла,
а лишь снижают вероятность его повреждения при падениях.

По всем вопросам связанным с установкой нашей продукции,
а также с гарантийными обязательствами,
обращайтесь пожалуйста напрямую в любое отделение Crazy Iron.
Контакты ближайших отделений смотрите на нашем сайте.