



CRAZY IRON

ID 4125312



МЫ ПРОИЗВОДИМ БЕЗОПАСНОСТЬ

KAWASAKI ER6-F snce 2012 (Required drilling fairig)

Installing:

Left side:

Right side:

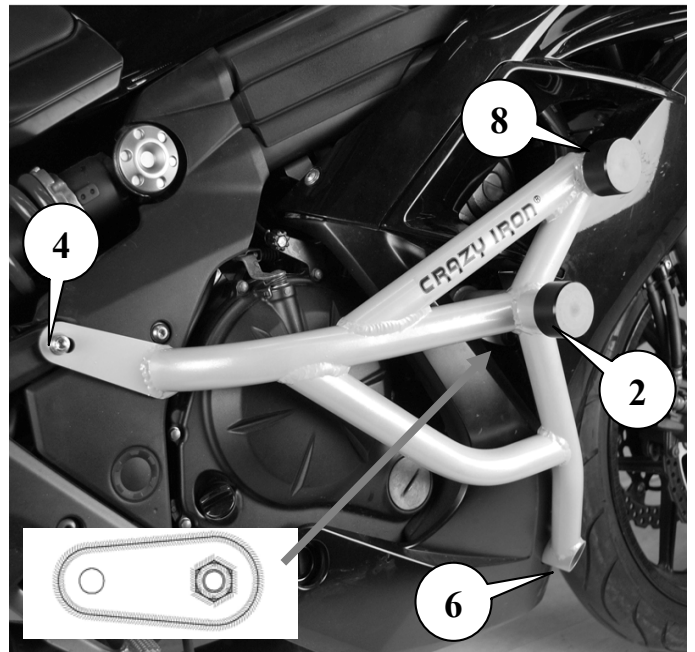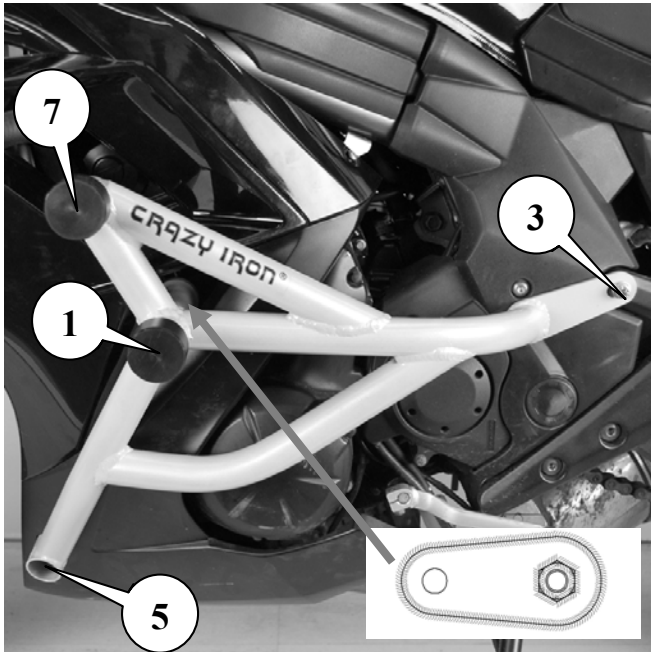

1. Install the plate for fixing the arc at this point on the factory bolt. Orient it so that all the attachment points of the arc to the motorcycle coincide. The arc is screwed to the plate with the bolt M10x40 + a slider + screw
2. The same way like # 1
3. Bolt M8x50 + sleeve 20x10x8
4. Bolt M8x50 + sleeve 20x10x8
5. Bolt M10x30 + washer + spring-washer + brace L=180 mm
6. Bolt M10x30 + washer + spring-washer + brace (# 5)
7. Slider+screw
8. Slider+screw

NEVER LOOSEN ENGINE BOLTS FROM THE LEFT AND RIGHT SIDES AT THE SAME TIME!!!

Tightening torques Nm		
Thread	Thread	
M6	M6	M6
M8	M8	M8
M10	M10	M10
M12	M12	M12

Внимание:

Дуги не гарантируют полную защиту мотоцикла,
а лишь снижают вероятность его повреждения при падениях.

По всем вопросам связанным с установкой нашей продукции,
а также с гарантийными обязательствами,
обращайтесь пожалуйста напрямую в любое отделение Crazy Iron.
Контакты ближайших отделений смотрите на нашем сайте.